

If You're In a Hurry

C 32 PROFESSIONAL STEREO PREAMPLIFIER

A LISTEN

Connects any indicated program source to the LISTEN program line and the loudspeakers without affecting the program fed to the tape recorder.

B MODE SELECTOR

Selects the desired perspective of sound from the program source selected.

C EQUALIZER FREQUENCY

Permits you to tailor five frequency bands to satisfy your tastes and the influences of your listening area.

D VOLUME

A precise tracking step attenuator. You get exact and noise free adjustment of volume to suit your pleasure.

E RECORD

Connects any indicated program source to the record program line and the connected tape recorders without affecting the program selected by the LISTEN switch and heard from the loudspeakers.

F TAPE 3 IN and OUT

Provides front panel input and output facilities for a third tape recorder. The program is fed from the RECORD program line.

G PHONO 1 and 2

With LISTEN switch in the PHONO position either of 2 turntables maybe selected. Above the pushbutton is a lighted rectangle- indicating the selection.

H RECORD MONITOR

When pushed in, the RECORD program line is connected to the LISTEN program line to permit hearing the material to be recorded on the tape recorder. A rectangle is lighted above the pushbutton when it is pressed in.

I EQ OUT

When pushed in, disconnects the EQUALIZER FREQUENCY circuits, the LF and HF filter circuits, and the subsonic protective circuits. The extend response is 10 to 100 kHz. A rectangle is lighted when the EQ OUT pushbutton is pressed in.

J LF and HF FILTERS

Permits the reduction of unwanted low frequency and high frequency noise and rumble. A rectangle is lighted above the pushbutton in the on position.

K SPEAKER/OUTPUT 1 and 2

Permits connection of the LISTEN program line to additional amplifiers for remote use, or with an accessory speaker relay to the on/off switching of two stereo loudspeaker locations. A rectangle is lighted above the pushbutton that is pressed in.



