

**installation
and
operating
instructions
for model HT-17
radio transmitter**



JUNE, 1947

94X170

the hallicrafters co.
MANUFACTURERS OF RADIO AND ELECTRONIC EQUIPMENT, CHICAGO 34, U. S. A.

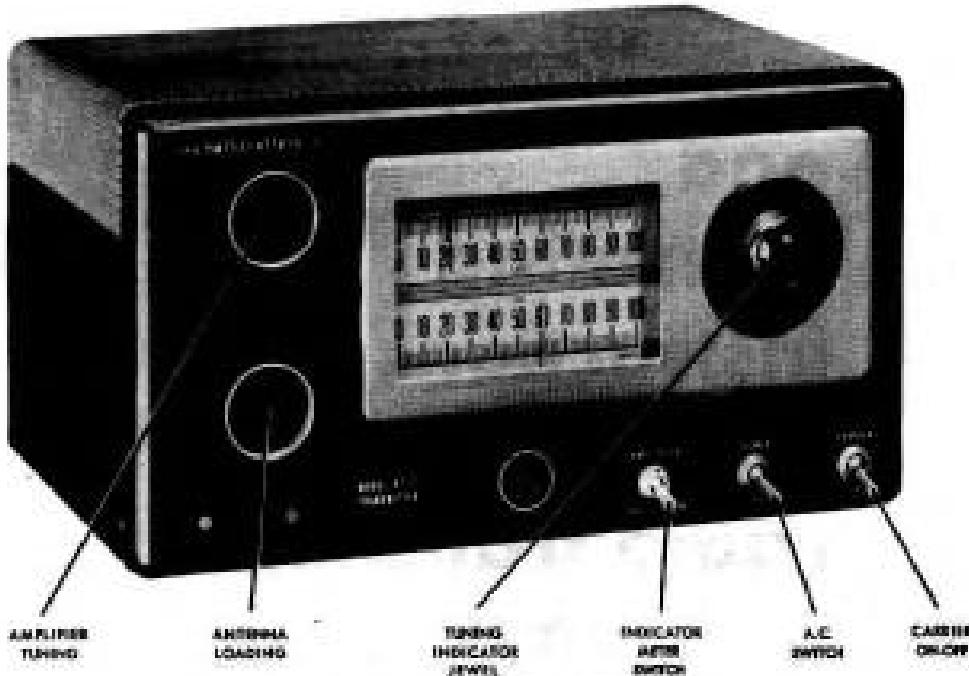


Figure 1. Front View, showing location of controls.

DESCRIPTION

GENERAL: The HT-17 is a crystal controlled transmitter designed to operate from a 105-125 volt 50/60 cycle power source. The normal power input is 25 watts, on all bands from 3.5 to 30 megacycles. The power output depends on the frequency of operation and the type antenna used. PI section antenna matching network and link coupling is provided on all bands with the exception of the 3.5 mc band which has provision for PI-section coupling only. The crystal oscillator operates straight thru on the 3.5 and the 7 mc bands. When using the transmitter on 14 mc band and higher, the crystal oscillator operates as a Tri-tet by removing the adaptor plug and plugging in the appropriate tank circuit and 7 mc crystal. Provision for external power supply is located on the rear apron of the chassis. A terminal strip for external connection of a modulator for phone operation is provided. A pilot lamp with a jewelled indicator is supplied for a visual tuning indicator, easily removed for installation of a SM-2 milliamper meter when desired.

TUBE COMPLIMENT: 807 Power Amplifier, 6V6 GT/G Crystal oscillator, and MU4G Rectifier.

POWER CONSUMPTION: 90 watts nominal at 117 volts, 60 cycle AC.

CAUTION: Moderately high voltage is present in the HT-17 transmitter and accidental contact with the plate supply could be fatal. When working with radio transmitters it is essential that safety precautions be observed at all times.

TUNING PROCEDURE

SO METERS:

Connect a ground lead to terminal #5 on TS-1 located on the rear apron of the chassis. (see Fig. 2). Plug in the line cord, switch "Power-Off" to "Power" and allow a few minutes for warm-up. Plug in

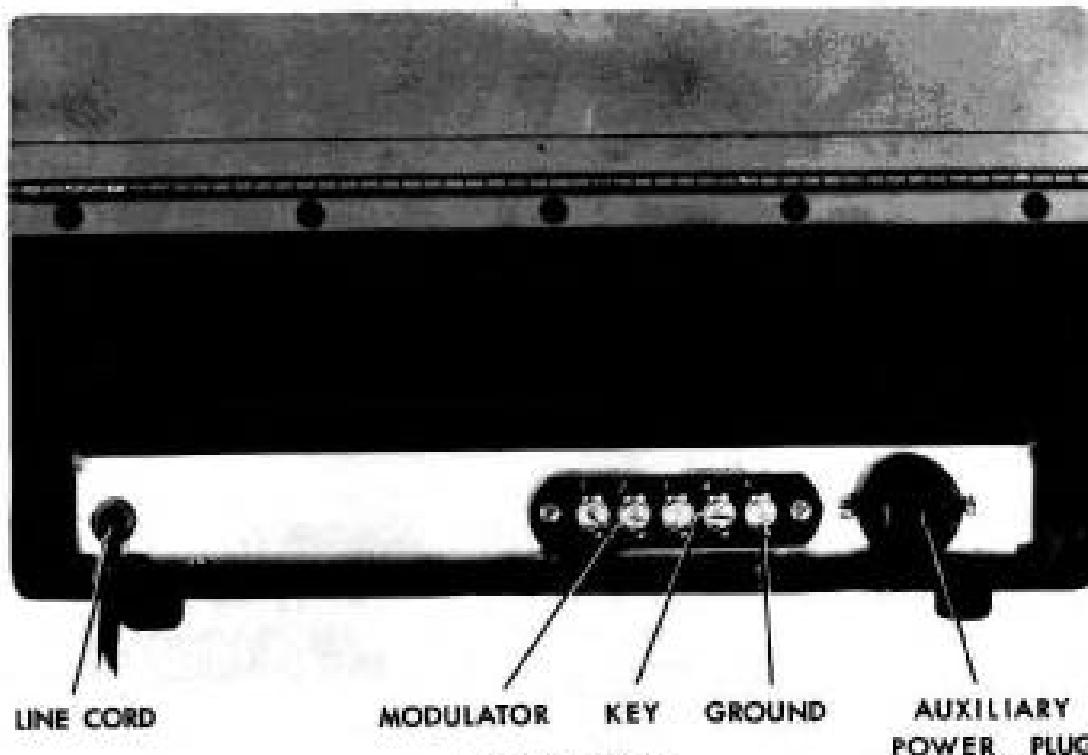


Figure 2. Rear View.

a 3.5 to 4.0 mc crystal in the crystal socket and plug in a 80 meter "PA" coil in the amplifier socket. (see Fig. 3) Switch "PA-Dac" to "PA", tune amplifier tank condenser for minimum "glow" on the jewelled indicator lamp. (see Fig. 1) Switch "Carrier-off" to "Off". Connect a single wire feed or end feed antenna to post #1 on antenna connector strip. Switch "Carrier-Off" to "Carrier". Adjust PI-section load condenser to 65 degrees on the dial scale. Tune "PA" tuning condenser for minimum "glow" on indicator lamp. Reset antenna load control to a lower reading on the dial scale and resonate "PA" tuning condenser. Continue to lower the reading on the load scale, resonating "PA" condenser at all times until there is no change in brilliancy in the indicator lamp. This condition indicates that the antenna is "overcoupled" and for maximum efficiency the load control should be backed off until there is a slight change in brilliancy as the "PA" condenser is resonated. The transmitter is now ready for operation on the 80 meter band.

40 METERS

Follow the same procedure as described in the 80 meter tuning procedure with the exception of plugging in a 40 meter PA coil and a 40 meter crystal. The same tuning procedure for the antenna tuning should be observed when using a single wire antenna on 40 meters except that the clip on the link coil is clipped onto the end turn of the tank coil. When feeding a two wire low impedance transmission line, the link coil clip should be clipped approximately three turns from the back end of the link coil for a 72 ohm line and slightly more turns for a higher impedance transmission line. Adjust the load control to "100" on the dial or "short". The only adjustment required is the "PA" control as the PI-section tuner is no longer in the circuit. Connect the transmission line to posts #1 and #2, turn on "Carrier" and adjust "PA" control for minimum "glow" on the tuning indicator.

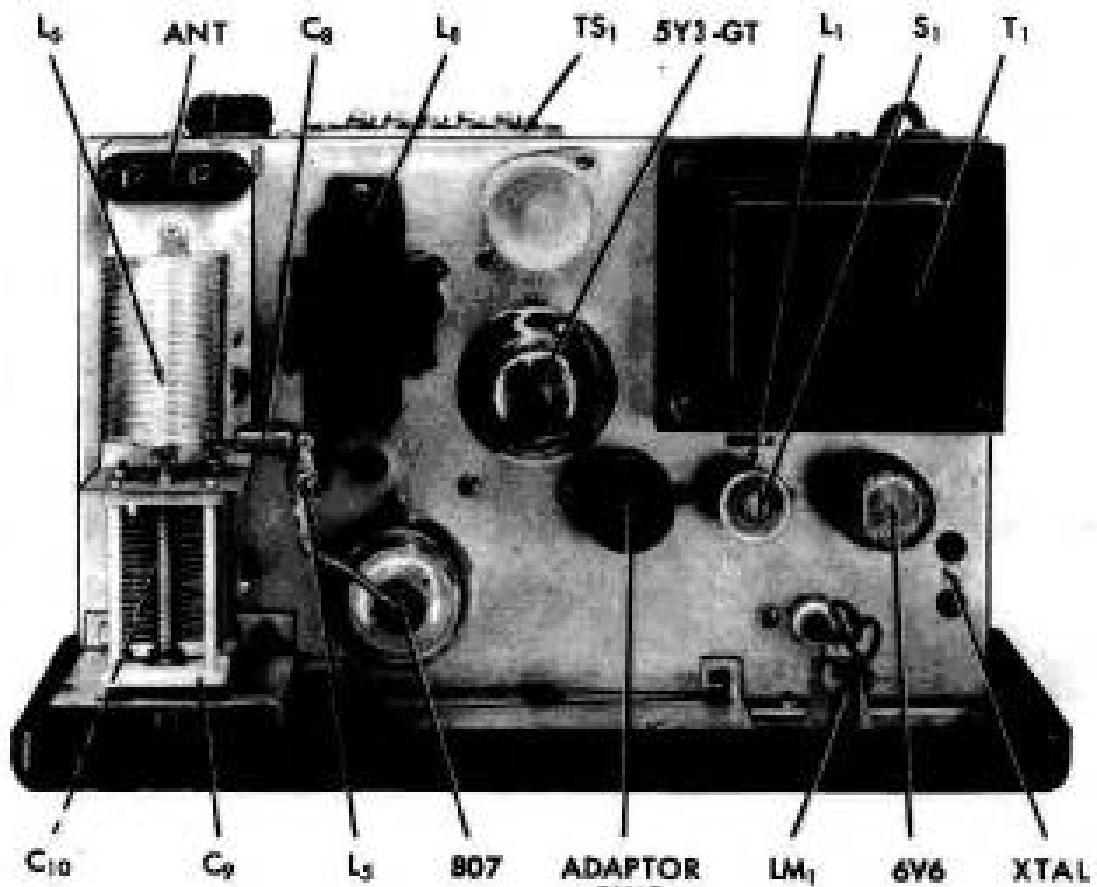


Figure 2. Top View of Chassis.

20, 15,* 11, AND 10 METERS:

Plug in a 40 meter crystal. (first make certain that the harmonic out-put will fall in the authorized Amateur bands) remove the adaptor plug, plug in proper oscillator coil (51B894, 14 mc), (51B895, 21 mc); (51B896, 28mc) and plug in proper Amplifier coil. Proceed as follows: "Power" on, "Osc" on, "Carrier" on. Tune Oscillator control knob located on top of the plug in oscillator coil for maximum "glow" on the tuning indicator. Adjust S-1 for maximum "glow" (see Fig. 3 for location) using a screw driver or alignment tool. Adjustment of S-1 is not critical, provided that active crystals are used however there will be an optimum setting for S-1 for best keying characteristics, and maximum excitation. Switch from "Osc" to "PA", tune amplifier control for minimum "glow" on the indicator lamp. Switch "Carrier" to "Off". Connect antenna and tune as de-

scribed in the previous chapter.

CAUTION: It is recommended that the 807 amplifier tube draw no more than 100 ma fully loaded, as higher plate current will shorten tube life.

KEYING:

Remove jumper wire from posts #3 and #4 on terminal strip TS-1 located on the rear apron of the chassis and connect keying leads to these terminals. Switch "Carrier-Off" to "Carrier" position. Monitor the signals, the keying should be crisp and clean. When operating the transmitter on the higher frequency bands, adjustment of S-1 to optimum setting will improve the keying quite noticeably. No trouble from "key-clicks" should be experienced because of a built in key-click filter employed in the circuit.

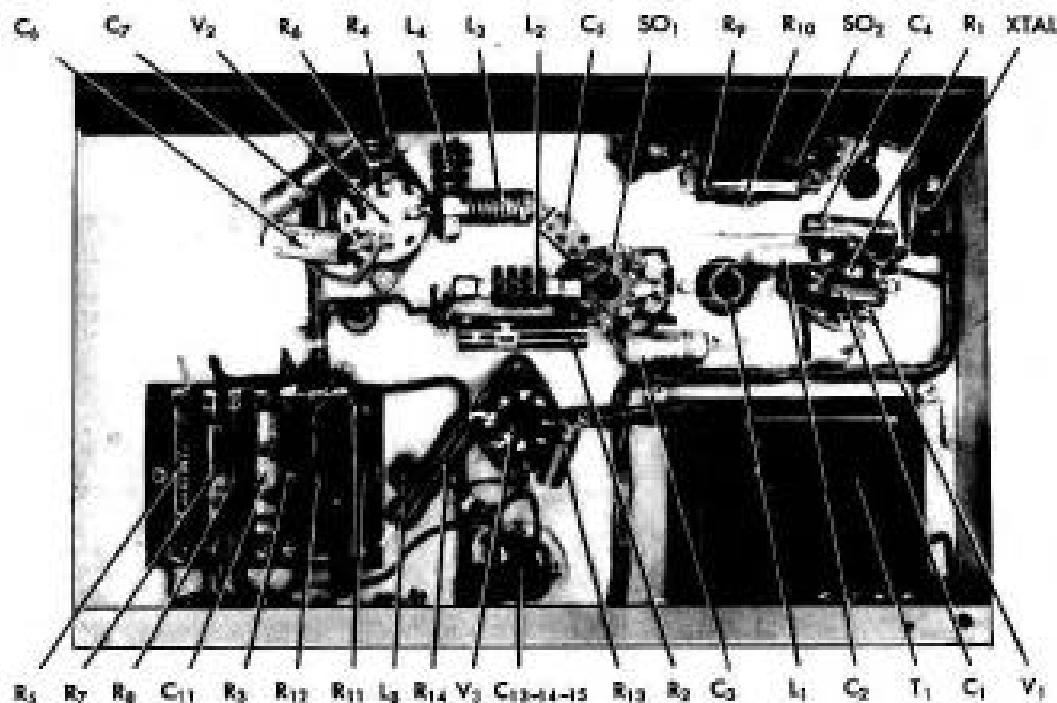


Figure 4. Bottom View of Chassis, showing location of component parts.

PHONE OPERATION:

Remove the jumper wire from terminals F1 and F2, connect the 5,000 ohm secondary winding of the modulation transformer to terminals F1 and F2. Constructional details for a suitable low power modulator may be found in the "Radio Amateurs Handbook" published by the ARRL, West Hartford, Conn. CAUTION: Do not operate the modulator unit without transmitter load as damage will result to the modulation transformer. The modulator should deliver about 10 to 15 watts of audio to modulate the final amplifier 100%.

AUXILIARY POWER PLUG:

Connections for external power supply is provided by means of a plug and socket located on the rear apron of the chassis. (See Fig. 3). Heater current for auxiliary power supply operation is 1.25 amperes at 6 volts, plate current is 135 mA at 400 volts DC. Total demand when used with a vibrapack or 6 volt battery is 1.8 amperes. See Fig. 5 for wiring diagram for PL-3.

*NOTE: Amateur operation in the 15 meter band (21 mc) as of this date of publication, has NOT been authorized by the Federal Communications Commission.

ANTENNAS:

For general all band operation, a 136' (approximately) end feed or single wire feed antenna should be erected as high as possible and in the clear. Other types of antennas can be erected. It is suggested that you refer to your "Radio Amateurs Handbook" for detailed constructional instructions.

REPLACEMENT PARTS LIST FOR ST-17

RESISTORS

Ref. No.	Description	Stock No.
R-2	15,000 ohms, 10% MF	24861630
R-11	2500 ohms, 10%, 20% MF	24862620
R-5	150 ohms, 10%, 10% MF	24860510
R-12	50,000 ohms, 10% MF	24201101M
R-9	100 ohms, 10% 1% N.Carbon	24200100M
R-8	100,000 ohms, 10% N.Carbon	24200100M
R-6	12,000 ohms, 10% N.Carbon	24200123K
R-10, 8	47 ohms, 10% 1% N.Carbon	242004708
R-1	97,000 ohms, 10% 1% N.Carbon	24200472M
R-7	21,000 ohms, 10% 1% N.Carbon	24200472M
R-9	3,000 ohms, 5% 1% N.Carbon	24200472M

CONDENSERS

C-13, 15, 16	Electrolytic, 10-30-10 mfd., 500 V.	4580512
C-4	Telestar, .01, 500 V., paper	45861632
C-8	Telestar, .02, 500 V., paper	45862632
C-3, 11	Telestar, .03, 500 V., paper	45871632
C-12	Telestar, .05, 500 V., paper	45880632
C-7	Telestar, .002 500 V., paper	45822632
C-10	Variable, 500 micro, Air	4580160
C-9	Variable, 100 micro, Air	4580161
C-1	Mica, 1 mfd., 500 V.	CM2040608
C-5	Mica, 100 mfd., 500 V.	CM2041012
C-6	Mica, .001 mfd., 100, 500 V.	CM2041222
C-17	Mica, 2200 mfd., 100, 500 V.	CM2042222
C-2, 10	Mica, .0027 mfd., 100, 500 V.	CM2042722

COILS, CHOKES & TRANSFORMERS

L-9	Coil, R.F., 1.0 mh	514134
L-1	Coil, cathode	518081
L-1	Transformer, power	520112-1
L-2	Choke, R.F., 1.5 mh	521012
L-5	Choke, R.F., 1.5 mh, long base	521120
L-3	Parasitic suppressor choke	521012
L-6	Choke, filter, 8 Henry	521012
L-9	Oscillator plate tuning unit, 25.0 mc	518088
L-9	Oscillator plate tuning unit, 21.0 mc	518088
L-9	Oscillator plate tuning unit, 14.0 mc	518088
L-8	PT tank coil, plug in, 2.0 mc	518087
L-8, 7	PT tank coil, plug in, 7.0 mc	518088
L-8, 7	PT tank coil, plug in, 14.0 mc	518088
L-8, 7	PT tank coil, plug in, 21.0 mc	518088
L-8, 7	PT tank coil, plug in, 25.0 mc	518088

MISCELLANEOUS

	Line cord	874078
	Dial cord	248691
SH-1	Bolt, pilot head	248617
	Painter, dial	248123
	Painter, dial	248123-1
	Dial scale	248691
H-1	Meter, 0-150 ma.	248138*
	Knob, control	248697
	Plate cap, 807 (with lead)	248626
	Antenna binding post	248626
	Coaxial tube socket, side fitted	248115
	Cell socket, 2 prong	248187
	Crystal socket	242288
SG-2	Socket, 2 prong, water-indicator	242240
	Socket, tube, 2 prong	242261
PL-2	Plug, indicator-meter	248187
PL-3	Plug, octal, acc. power.	104200-1
SM-1	Switch, SPST, bat handle	248277
SM-1, 2	Switch, SPST, bat handle	248281
	Pilot light socket	248088

Tubes

V-1	4120ST/4, oscillator	2486007/8
V-2	887 power amplifier	2486007
V-3	888A testifier	2486006

Figure 6. Schematic Diagram

