

# communications

SERVICE INSTRUCTIONS

5-77

**the hallicrafters co.**

MANUFACTURERS OF RADIO AND ELECTRONIC EQUIPMENT, CHICAGO 26, ILL. U.S.A.



Radio Receiver, Model S-77, front view.

9221140-A

## GENERAL SPECIFICATIONS

Tubes . . . . . Seven plus rectifier  
 Speaker . . . . . 5-inch PM  
 Speaker V.C. Impedance . . 3.2 ohms  
 Headset Output . . . . . Low Impedance  
 Antenna . . . . . Provision for external antenna  
 Tuning. . . . . Manual  
 Intermediate Frequency . . 455 kc  
 Power Supply . . . . . 105-125 V. DC/60 cycles AC  
                             (using 117 V. ballast tube, R-38)  
                             or 210-250 V. DC/60 cycles  
                             AC (using 220 V. ballast tube, R-39)  
 Power consumption . . . . 40 Watts

### TUNING RANGE

Band Selector Position	Frequency Range
1.	540 kc - 1680 kc
2.	1680 kc - 5.4 mc
3.	5.3 mc - 15.5 mc
4.	15.5 mc - 44 mc

## SERVICE INSTRUCTIONS

### RESTRINGING DIAL CORD

To restring the main tuning dial cord, cut a 15-inch length of 30 lb. test dial cord and tie one end to the tension spring of the main tuning capacitor drive pulley at position "1" on the diagram. Follow the numbers "1" through "4", and at position "4" stretch the tension spring and tie the cord securely.

To restring the band spread tuning dial cord cut a 22-inch length of dial cord and follow the procedure as above, starting at position "A" on the diagram. Note that the tuning drive shafts are wrapped with two and a fraction turns of dial cord for proper traction.

### REPLACING LAMPS

Refer to Fig. 7 for the location of the two dial lamps used in the receiver. To gain access to defective lamps, reach in through cabinet cover and unclip the dial lamp sockets. The sockets may then be brought out into the open to change the defective lamp. Replace lamps with 6-8 V. G.E. #47 (brown bead) lamps or equivalent.

### ALIGNMENT PROCEDURE

For I-F amplifier alignment it will be necessary to remove the receiver chassis from the cabinet. The chassis is held in the cabinet by three screws along both the bottom edge of the front panel and the rear of the cabinet, and two screws on either side of the front panel.

NOTE - R-F alignment should be accomplished through the holes provided in the cabinet bottom as the oscillator calibration will be effected slightly by changes in the capacity between the cabinet bottom and the r-f coils and wiring.

Before starting the alignment procedure, check the position of the main tuning index marker on the low frequency end of the range and set the bandspread dial on zero position. The main tuning condenser should index at max. capacity, and the bandspread condenser at min. capacity.

The standard RMA dummy antenna mentioned in the alignment chart consists of a 200 mmf. condenser in series with a 20 uh r-f choke which is shunted by a 400 mmf. condenser in series with a 400 ohm carbon resistor.

Set the following controls before alignment

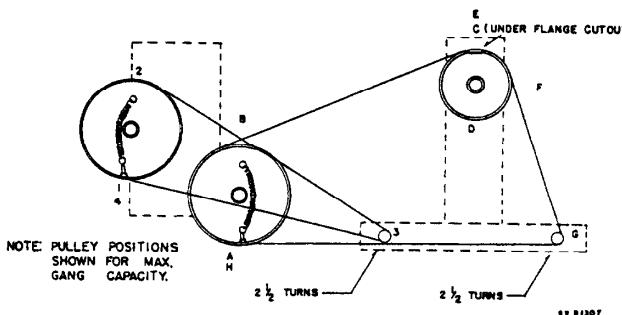


FIG. 1. DIAL CABLE STRINGING PROCEDURE


- SENSITIVITY . . . . . Set at maximum
- VOLUME . . . . . Set at maximum
- AVC switch. . . . . Set at OFF
- BAND SPREAD . . . . . Set at zero
- CW/AM . . . . . Set at AM (See Step 2)
- NOISE LIMITER . . . . . Set at OFF
- STANDBY/RECEIVE . . . . . Set at RECEIVE
- TONE SWITCH . . . . . Set at HIGH

For the settings of the remaining controls, see alignment chart.

**ALIGNMENT CHART**

Step	Dummy Antenna	Signal Generator Coupling	Signal Generator Frequency	Band Switch Setting	Receiver Dial Setting	Adjust	Remarks
1	None	Stator plates in center section of tuning gang.	455 kc	"1"	1000 kc	A,B,C, D,E,F	Maximum audio output at speaker voice coil. Use just enough signal generator output to obtain a 50 MW signal level.
2	None	See step 1	455 kc (No modulation)	"1"	1000 kc	G	With the CW/AM switch set at CW, remove the pitch control knob and adjust "G" for zero beat. Replace the knob with the dot on the center position.
3	Std RMA dummy	"A1" on antenna strip. Jumper connected between "A2" and "G".	36 mc 18 mc	"4"	36 mc 18 mc	*Y,I,J *K,L,M	Maximum output as in step 1.
4	Std RMA dummy	See step 3	14 mc 10 mc	"3"	14 mc 10 mc	*N,O,P *Q,R,S	Maximum output as in step 1.
5	Std RMA dummy	See step 3	5 mc 1.8 mc	"2"	5 mc 1.8 mc	*T,U,V *W	Maximum output as in step 1.
6	Std RMA dummy	See step 3	1500 kc 600 kc	"1"	1500 kc 600 kc	*X,Y,Z *Z	Maximum output as in step 1.

\*Note - Calibration adjustments.

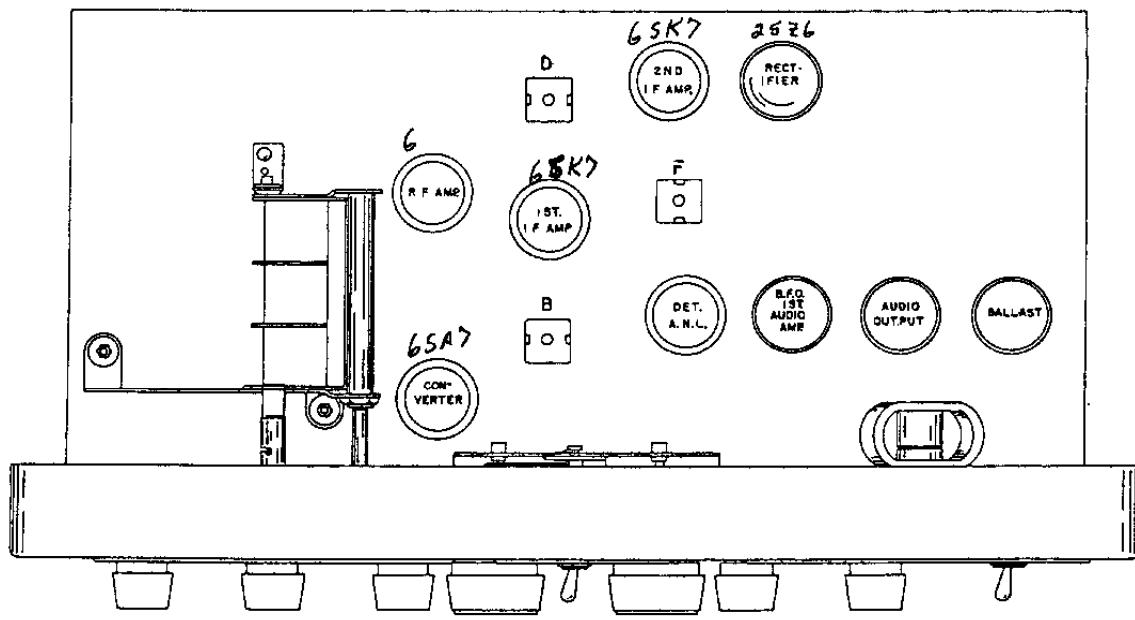

9201810

FIG. 2. TOP VIEW, ALIGNMENT POINTS

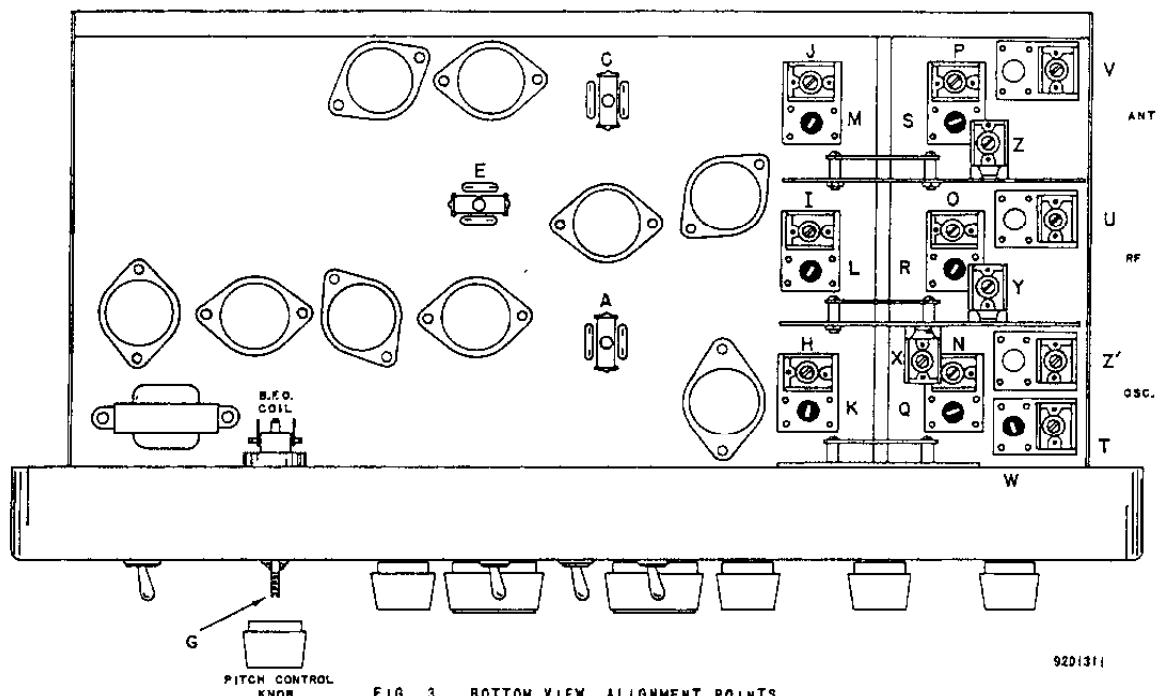


FIG. 3. BOTTOM VIEW, ALIGNMENT POINTS

9201311

R<sub>38</sub> (110 V)  
R<sub>39</sub> (220 V)    LS<sub>1</sub>    V<sub>7</sub>    V<sub>6</sub>    V<sub>5</sub>    LM<sub>1</sub>    T<sub>9</sub>    V<sub>2</sub>    LM<sub>2</sub>


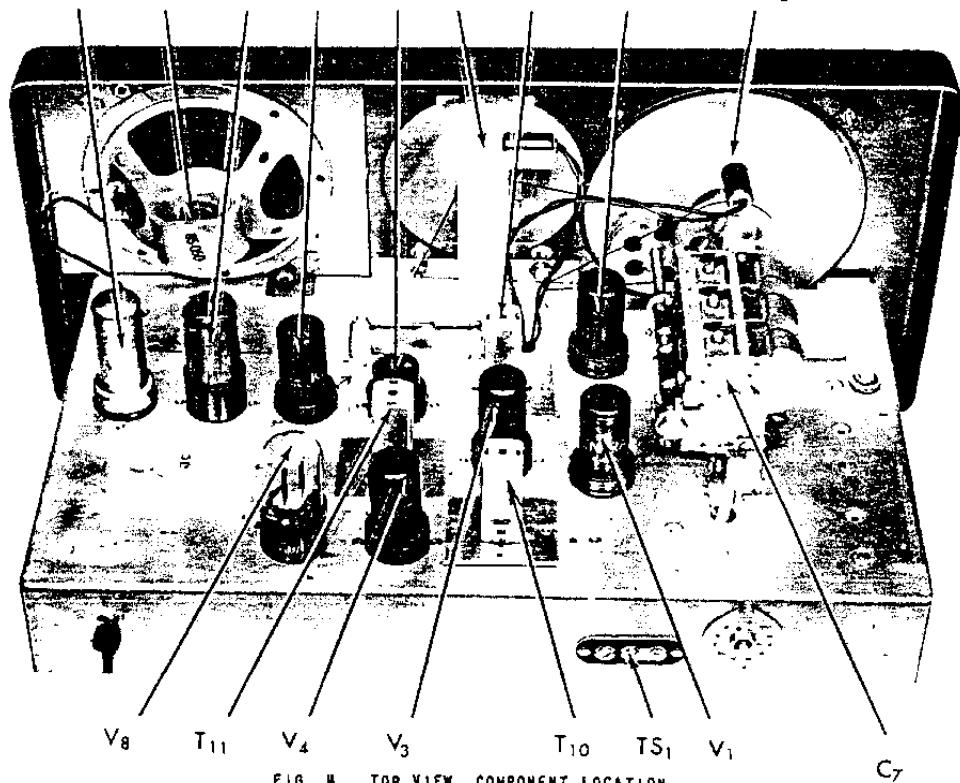


FIG. 4. TOP VIEW, COMPONENT LOCATION

92X1313

Page 5

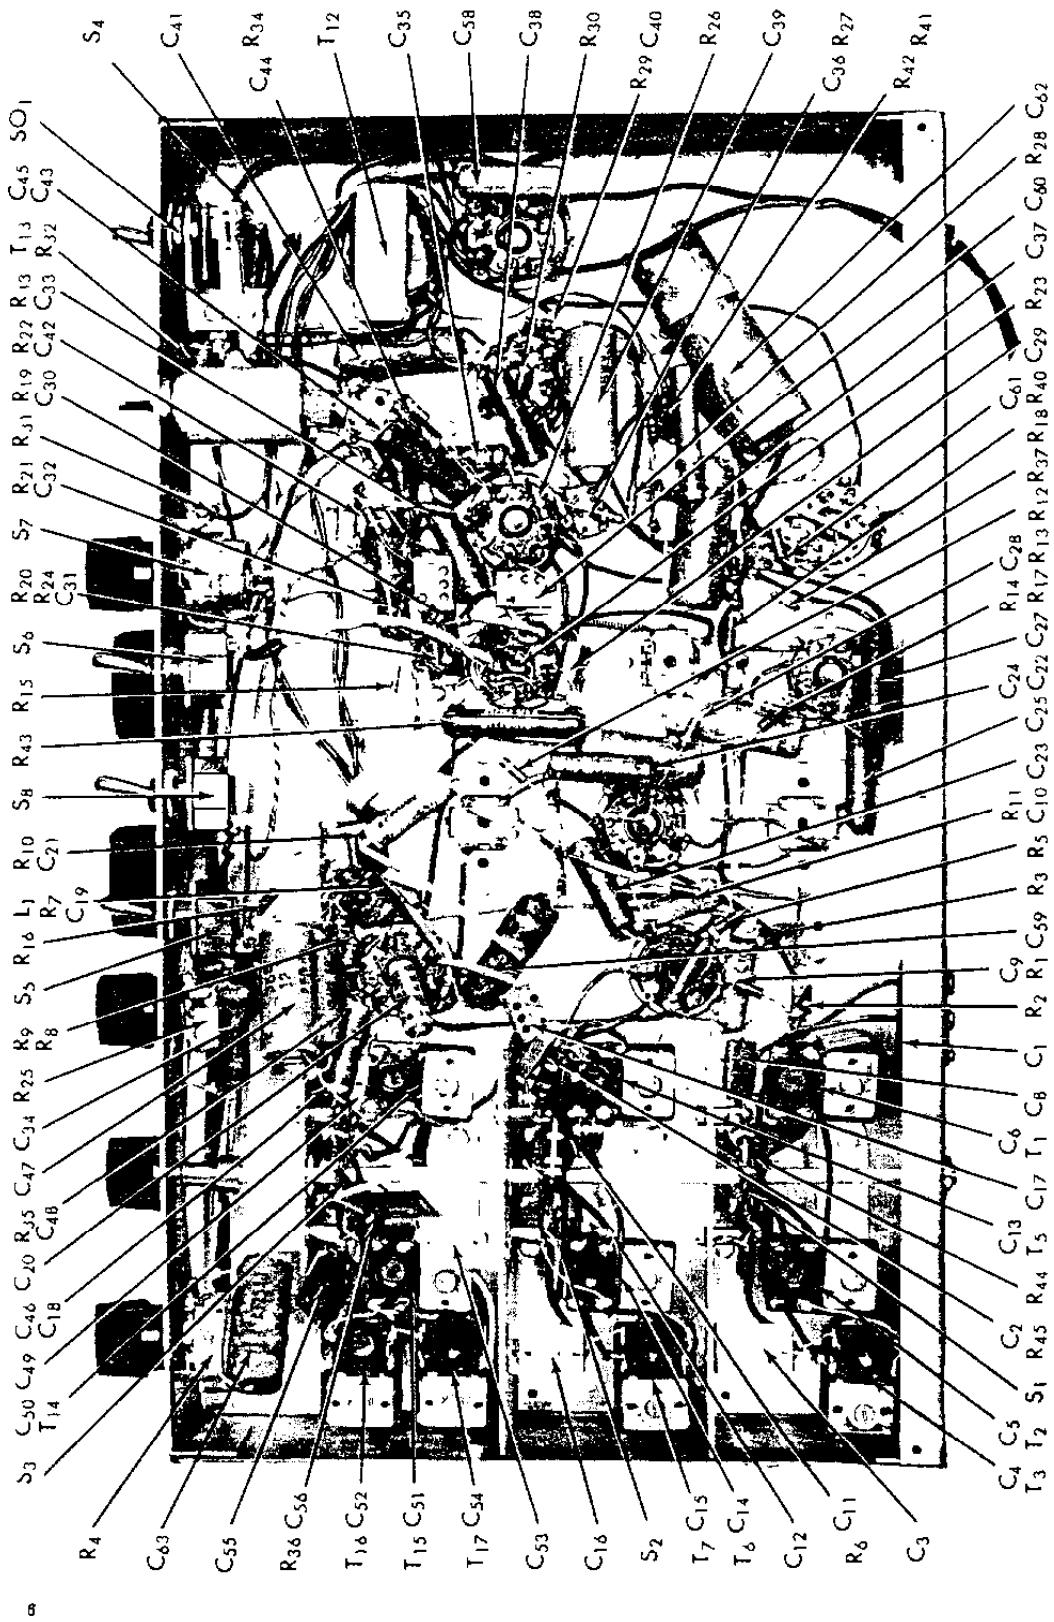

921012

FIG. 5. BOTTOM VIEW, COMPONENT LOCATION

## SERVICE PARTS LIST

Ref. No.	Description	Hallcrafters Part Number	Ref. No.	Description	Hallcrafters Part Number	
<b>CAPACITORS</b>					<b>TRANSFORMERS AND COILS</b>	
C-1,9,10,21, .01 mfd. 600V., tubular paper 23,38,43	46AZ103J	L-1	Choke, RF	53A138		
C-2,42,60 100 mmf. 500V.. mica	47X20B101K	T-1	Coil, antenna; band 4	51B783		
C-3,16,53 Trimmer, 2-20 mmf.	44A191	T-2	Coil, antenna; band 3	51B782		
C-4 Trimmer (part of coil T-3)		T-3	Coil, antenna; bands 1 and 2	51B1241		
C-5 Trimmer (part of coil T-2)		T-5	Coil, RF, band 4	51B787		
C-6 Trimmer (part of coil T-1)		T-6	Coil, RF; band 3	51B786		
C-7 Tuning capacitor, 3 section; ganged	48C240-B	T-7	Coil, RF; bands 1 and 2	51B1240		
C-8,17,36, 61 220 mmf. 500V.. mica	47X20B221K	T-9,10	Transformer, 1st and 2nd IF	50C243		
		T-11	Transformer, IF (detector stage)	50C242		
		T-12	Transformer, audio output	55B110		
C-11 24 mmf., ceramic	47X25UK240M	T-13	Coil, PITCH CONTROL	54B044		
C-12 15 mmf., ceramic	47X21UK150M	T-14	Coil, oscillator, band 4	51B791		
C-13 Trimmer (part of coil T-5)		T-15	Coil, oscillator; band 3	51B913		
C-14 Trimmer (part of coil T-6)		T-16	Coil, oscillator; band 2	51B789		
C-15 Trimmer (part of coil T-7)		T-17	Coil, oscillator; band 1	51B912		
C-18,44 270 mmf. 500V.. mica	47X20B271K	<b>SWITCHES</b>				
C-19,40 .005 mfd. 600V., tubular paper	46AZ502J	S-1	Wafer, bandswitch; antenna stage	60B389		
C-20,35 .003 mfd. 600V., tubular paper	46AY302J	S-2	Wafer, bandswitch; RF stage	62B039		
C-22,25,27, 33,34 .02 mfd. 200V., tubular paper	46AU203J	S-3	Wafer, bandswitch; oscillator stage	62B044		
C-24,28,41 .05 mfd. 600V., tubular paper	46AY503J	S-4,5,6,8,	Switch, toggle (SPST); STANDBY- RECEIVE, A.V.C., A.N.L., and CW-AM	60A138		
C-25,57 2 mmf., wire gimmick		S-7	Switch, PWR-TONE	60A225		
C-29,30 .47 mmf. 500V., mica	47X20B470K	<b>PLUGS AND SOCKETS</b>				
C-31,32,48 .06 mfd. 200V., tubular paper	46AU503J	PL-1	Line cord and plug	87B1573		
C-37 .1 mfd. 600V., tubular paper	46AY104J	SO-1	Jack, PHONES	35B004		
C-39 10 mfd. 25V., electrolytic	45A121	SO-2	Socket, octal, ballast tube	6A250		
C-45 470 mmf. 500V., mica	47X20B471J		Socket, octal, tube	6A250		
C-46 .002 mfd. 600V., tubular paper	46A2202J		Socket, dial lamp (main tuning dial)	86B101		
C-47 10 mfd. 150V., electrolytic	45A097		Socket, dial lamp (bandspread dial)	68B068		
C-49 68 mmf., ceramic	47X25UK680K	<b>TUBES, RECTIFIERS AND DIAL LAMPS</b>				
C-50 Trimmer (part of coil T-14)		V-1	Type 6SG7, RF amplifier	90X6SG7		
C-51 Trimmer (part of coil T-15)		V-2	Type 6SA7, converter	90X6SA7		
C-52 Trimmer (part of coil T-16)		V-3,4	Type 6SK7, 1st and 2nd IF amplifiers	90X6SK7		
C-54 Padder (part of coil T-17)		V-5	Type 6H6, detector and A.N.L.	90X6H6		
C-55 1600 mmf. 500V., mica	47X35C152J	V-6	Type 6SC7, audio amp. and B.F.O.	90X6SC7		
C-56 3000 mmf. 500V., mica	47X35B302K	V-7	Type 2SL6GT, audio output	90X25L6GT		
C-58 .02 mfd. 600V., molded tubular paper	46BR203L6	V-8	Type 25Z6GT/G, rectifier	90X25Z6GT/G		
C-59 Resonant capacitor (.05 mfd. 600V.)	46A150	LM-1,2	Lamp, dial; GE #47	39A004		
C-62 50-20-20 mfd. 150V., electrolytic	45B128-C	<b>MISCELLANEOUS</b>				
C-63 .25 mfd. 200V., tubular papar	46AT254J		Bandswitch and shaft	60B392		
<b>RESISTORS</b>					Cabinet (lower section)	
R-1 22 ohms 1/2 watt, carbon	23X20X220K		Cabinet front panel	66E359		
R-2,7,20 1 megohm 1/2 watt, carbon	23X20X105M		Cabinet top	66D616		
R-3 120 ohms 1/2 watt, carbon	23X20X121K		Dial, bandspread	83B372		
R-4 10,000 ohms; SENSITIVITY control	25B590		Dial, main tuning	83C240		
R-5,10,11, 14,18,35, 44 1000 ohms 1/2 wait, carbon	23X20X102K		Dial cord	38A001		
R-6,45 6800 ohms 1 watt, carbon	23X30X882K		Foot, rubber	16A007		
R-8 18,000 ohms 1/2 watt, carbon	23X20X183K		Glass, bandspread tuning dial	22A307		
R-9 6.8 ohms 1/2 watt, carbon	23X20X068K		Glass, main tuning dial	22B199		
R-12,21,28 100,000 ohms 1/2 watt, carbon	23X20X104M		Knob, BAND SELECTOR	15A266		
R-13,17 330 ohms 1/2 watt, carbon	23X20X331K		Knob, PITCH CONTROL	15A058		
R-15,23 2.2 megohms 1/2 watt, carbon	23X20X225M		Knob, TUNING and BANDSPREAD	15A047		
R-16,30 150 ohms 1/2 watt, carbon	23X20X151K		Knob, SENSITIVITY, VOLUME and TONE	15A049		
R-19,34 47,000 ohms 1/2 watt, carbon	23X20X473K		Lock, line cord	76A397		
R-22,27 330,000 ohms 1/2 watt, carbon	23X20X334M		Screw, Allen head (6-32 x 3/16)	3A1122		
R-24,29 470,000 ohms 1/2 watt, carbon	23X20X474M		Slug, adjustable tuning	77A068		
R-25 500,000 ohms; VOLUME control	25B586	LS-1	Speaker, PM; 5 inch	85B050		
R-26 10 megohms 1/2 watt, carbon	23X20X106M		Spring, dial cord	75A012		
R-31 4700 ohms 1/2 watt, carbon	23X20X472K		Spring, retainer	75A062		
R-32 15 ohms 1 watt, carbon	23X30X150M		Terminal strip, antenna	88A032		
R-33 15,000 ohms 1/2 watt, carbon	23X20X153K					
R-36 10 ohms 1/2 watt, carbon	23X20X100K					
R-37 270,000 ohms 1/2 watt, carbon	23X20X274M					
R-38 Ballast tube (117V.)	24B875					
R-39 Ballast tube (220V.)	24B874					
R-40 15 ohms 1/2 watt, carbon	23X20X150K	TS-1				
R-41 100 ohms 1/2 watt, carbon	23X20X101K					
R-42 1000 ohms 2 watts, carbon	23X40X102K					
R-43 110 ohms 10 watts, WW	24BG111E					

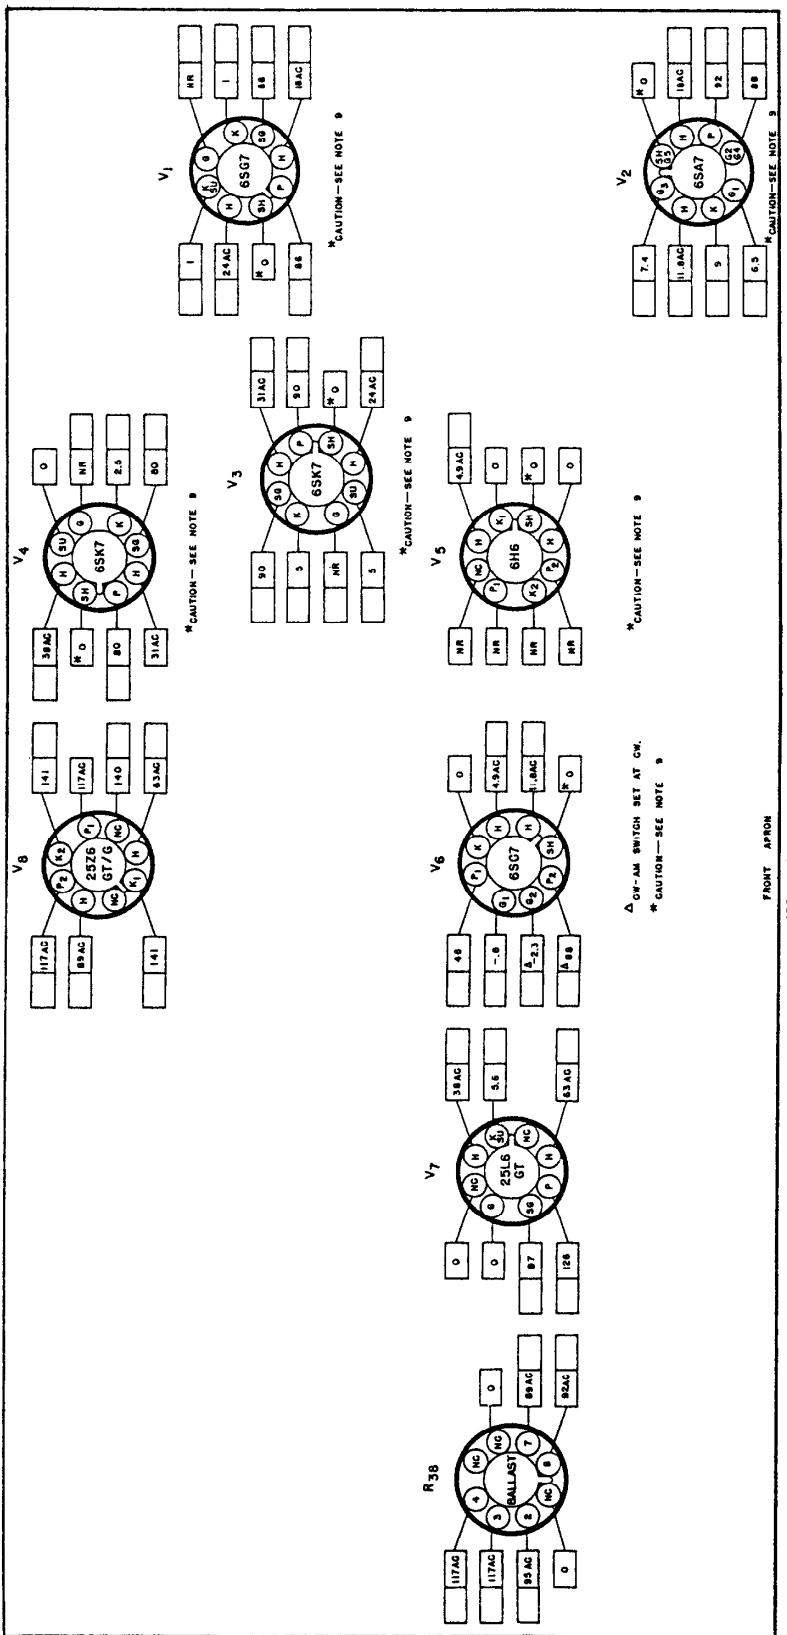


FIG. 6. TUBE SOCKET VOLTAGE CHART

D2B1309


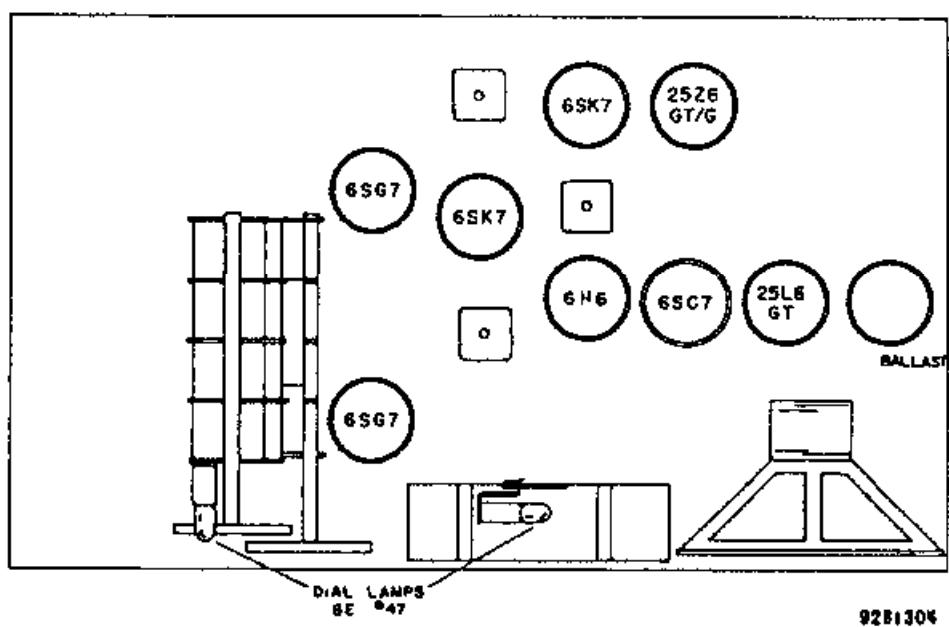


FIG. 7. TOP VIEW, LOCATION OF TUBES AND DIAL LAMPS

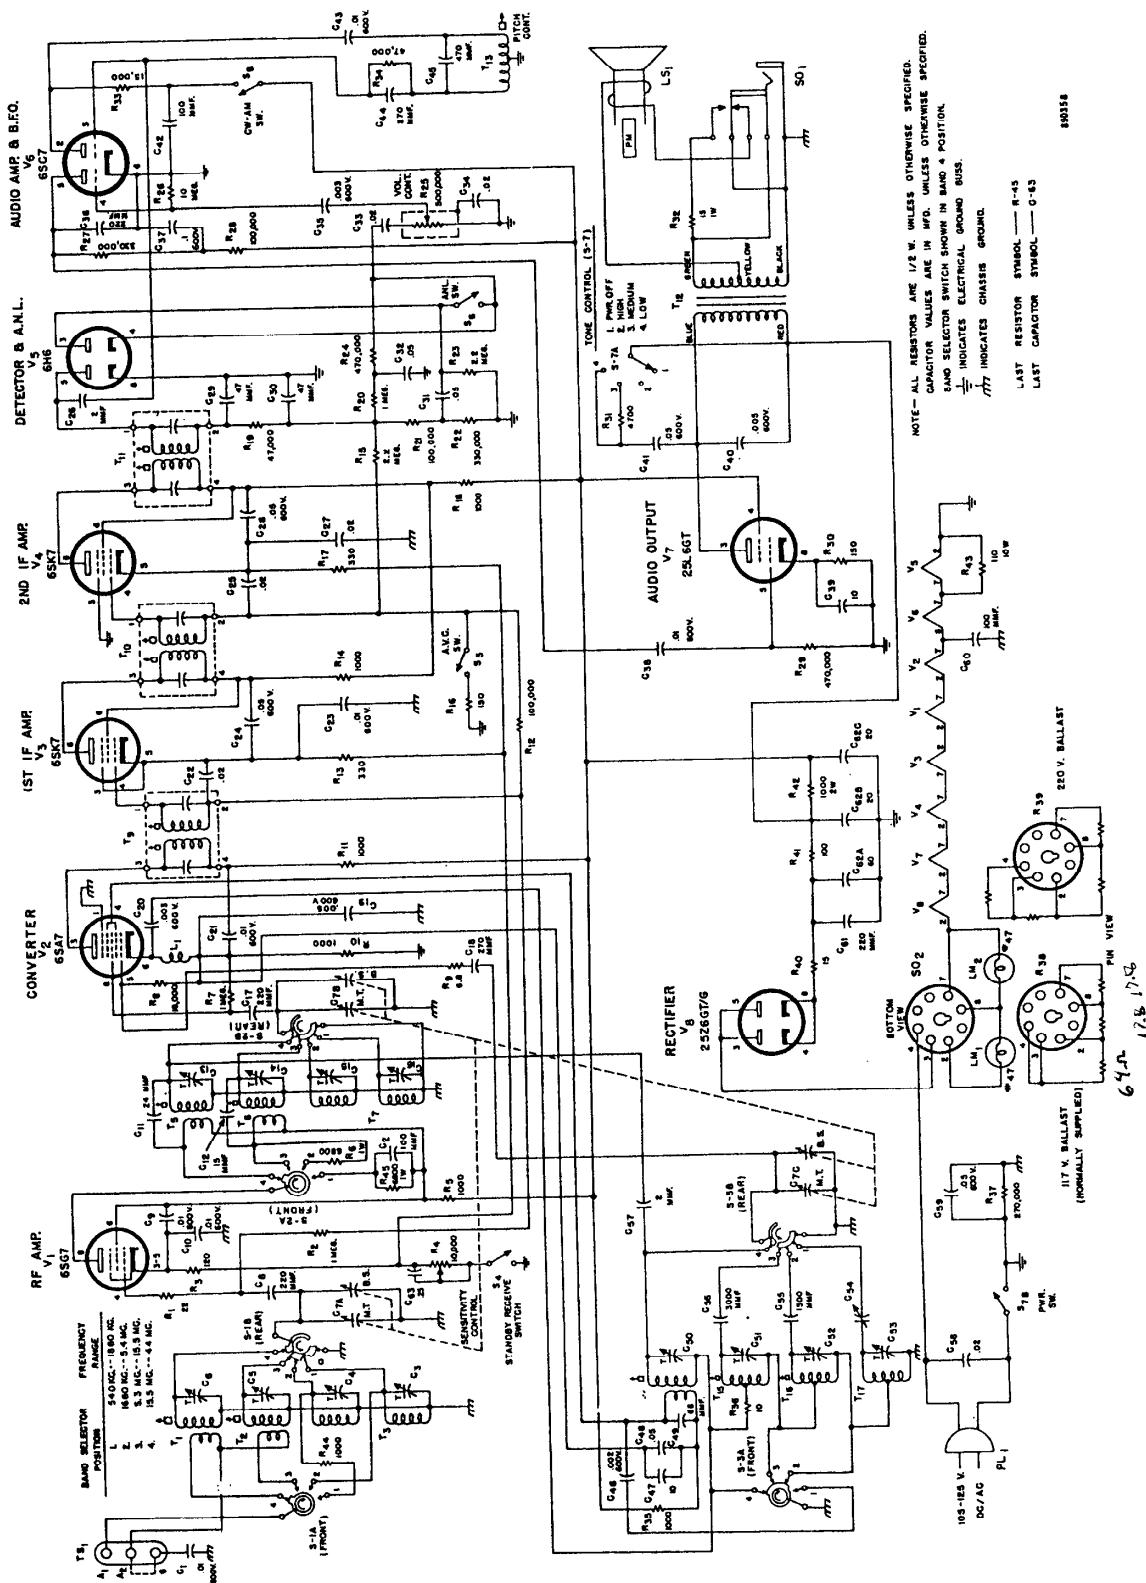

"The Marconi Co. reserves the privilege of making  
variations in current production of equipment and assumes  
no obligation to incorporate these revisions in earlier  
models."


FIG. 3. SCHEMATIC DIAGRAM

642B


175

Replacement ckt

110v BALLAST

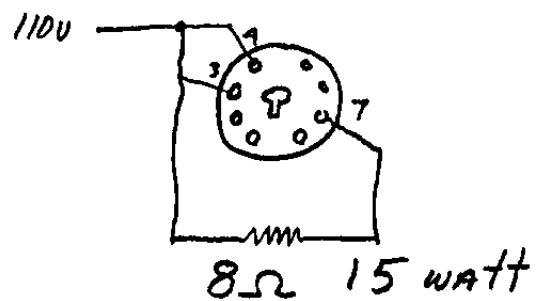


Re wire Panel Lamps.

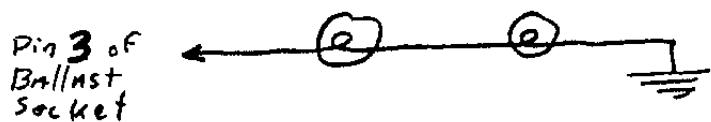

Replace Bulbs with "Chicago Miniature  
TYPE 1835 (55volt @ .05A) or Similar

Replacement ckt

220v Ballast

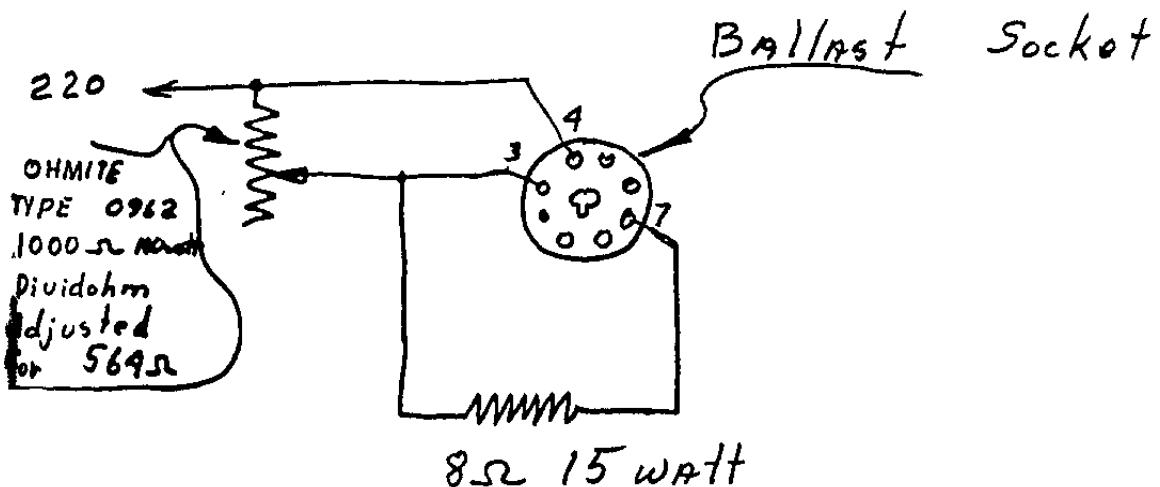

Rewire Panel Lamps



Replace Bulbs with "Chicago Miniature"  
TYPE 1835 (55 volt @ .05A) or similar